

WARRANTY

Martel Electronics Corporation warrants the MECP2000 pneumatic pump against defects in materials and workmanship for a period of twelve (12) months after date of sale. An invoice may be required as proof of purchase for warranty claims. Damage due to contamination or other misuse is not covered under this warranty.

To obtain warranty or non-warranty service download an RMA form from www.martelcalibrators.com/pdf/martel_rma_form.pdf. Complete the form and include it with the shipment. Send the product pre-paid using a trackable shipment method to the address on the form. Martel is not responsible for goods sent by postal mail without tracking information.

MARTEL
ELECTRONICS



MECP2000 High Pressure Pneumatic Hand Pump/Comparator

Operating Instructions

Introduction

The Martel MECP2000 pneumatic hand pump is capable of generating pressures up to 2000psi (135 bar) and vacuum down to -14psi (0.9bar) at sea level. For very low pressures (less than 15psi/1bar) the fine adjustment vernier can be used to generate precise pressures. The pump uses a unique dual stage pumping design where the initial part of the stroke fills the air chamber which at mid stroke forces the air into a smaller chamber to boost the pressure even further. The design allows for high pneumatic pressures to be achieved with a minimal amount of effort.

The pump has two dedicated output ports so a reference device (calibrator or digital gauge) can be attached into one of the ports and the device under test can be connected to the other port. The pump also incorporates a unique isolation valve that greatly reduces the leak rate by sealing the output ports from the pump valving. This feature also helps keep contaminants away from the pumping valves during the venting process.

MARTEL
ELECTRONICS

www.martelcorp.com

e-mail: sales@martelcorp.com


Tel: (603) 434-1433 800-821-0023

Fax: (603) 434-1653

Martel Electronics
3 Corporate Park Dr.
Derry, NH 03038

Operation

Before you begin to use the pump familiarize yourself with the controls and connections on the pump. The drawing below highlights these components.

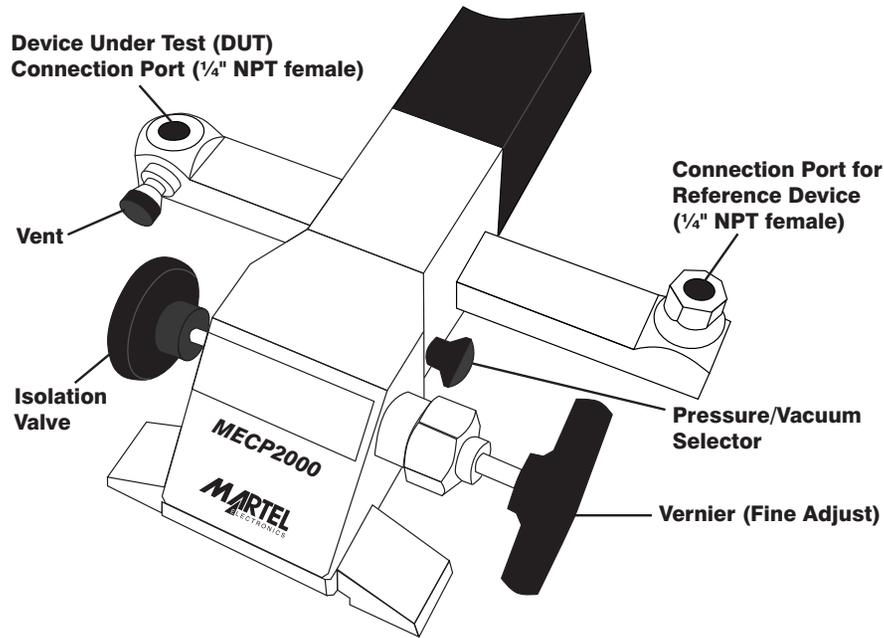

1. Connect the pressure reference (calibrator or digital gauge) to the right side reference device connection port. Be sure to use Teflon tape to seal the threads. A BSPP adapter is provided if needed.
2. Connect the device under test to the left side output port. Again be sure to use Teflon tape. A BSPP adapter is provided if needed.
3. Place the pressure/vacuum selector switch into the desired mode. Note that the selector switch has a spring loaded safety interlock. You must move the interlock out from under the selector switch in order to push the selector switch in to activate the vacuum mode.
4. Set the valves in the following positions (these settings apply to both pressure and vacuum).
5. Close the vent valve (gently turn it clockwise until it bottoms out).
6. Open the isolation valve (for best performance make sure that it is at least one turn open from being fully closed).

7. Place the vernier (fine adjustment knob) near the middle of its travel.
8. Slowly raise the pump handle and begin to pump to the desired pressure. It's important that you use the full range of stroke to generate the pressure to minimize the amount of strokes needed. It's even more important if the desired pressure is above 500psi (35) as without a full stroke the secondary pressure chamber is not fully activated.
9. Once the desired pressure (or vacuum) is reached gently close the isolation valve and use the vernier knob to make the final pressure adjustments.
10. To release the pressure (or vacuum) SLOWLY open the vent by turning the vent knob counterclockwise to release the pressure.

Tips for using the pump

- Try to always use the isolation valve especially at high pressure to reduce the leak rate and stabilize the pressure. The internal pump leak rate is very small even without using the isolation valve but using the valve also helps prevent contaminants from entering the pump during the venting process.
- Always be gentle with the valve controls to prevent damage to the valve seats. It doesn't take much torque to fully close a valve.
- When using the pump in the vacuum mode take care to insure that any liquid or dirt has been removed or cleared from the device under test. Failing to do this will allow dirt and fluids to enter the pump during the vacuum generation process.

Maintenance

If you follow the above mentioned operating procedure the pump will offer trouble free operation for a long time. However like any pneumatic device seals, valves and moving parts will wear over time. Dirt, moisture and other contaminants will greatly shorten the life span of the pump and will lead to frequent service intervals. Martel offers a kit that includes most of the high wear items. The pump must be taken apart to gain access to some of these parts so maintenance should only be carried out by individuals who have technical expertise in servicing pneumatic devices. To obtain a service kit order Martel Electronics Corp. part number 1010075.

You can also return the pump at any time for service by completing a RMA service request form which can be found on our web site, www.martelcalibrators.com/pdf/martel_rma_form.pdf.