

Nokeval

No 050101

**User's Manual
Models 201 & 202**




Contents

User's Manual Models 201 & 202	1
General description	3
Autopowered LED-displays	3
Typical application	3
Front panel buttons and indicators	5
Configuration mode	5
Resetting configuration parameters	5
Alarm level setting	5
Alarm functions	5
Disable alarms	5
Manual reset	5
Configuration	6
Enter into configuration mode	6
Access code for configuration	6
Description	7
Input terminals	7
Alarm connections, only with model 202	7
Measuring mode	7
Configuration mode	7
Alarms off	7


Nokeval Oy

Yrittäjätie 12
37100 NOKIA, FINLAND
Tel. +358 3-342 4800 email support@nokeval.com
Fax. +358 3-342 2066 http:// www.nokeval.com

Autopowered LED-displays 201 and 202

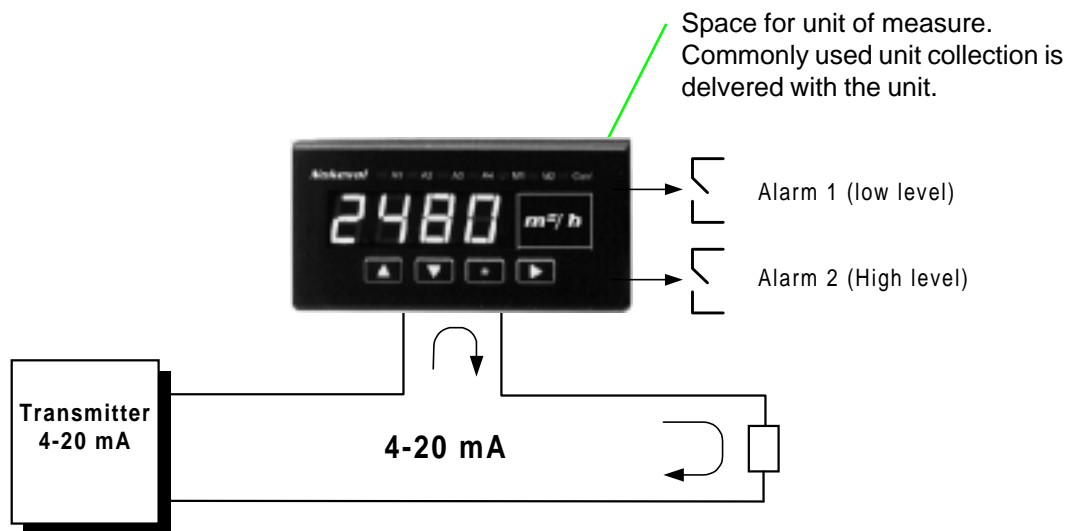

- For process input 4-20 mA
- Without external power supply
- Loop resistance 240 ohm only
- 4-digit processor based display
- Scaling on front panel
- 2 settable alarms
- Pass words for alarms and configuration
- Front panel rating IP 65

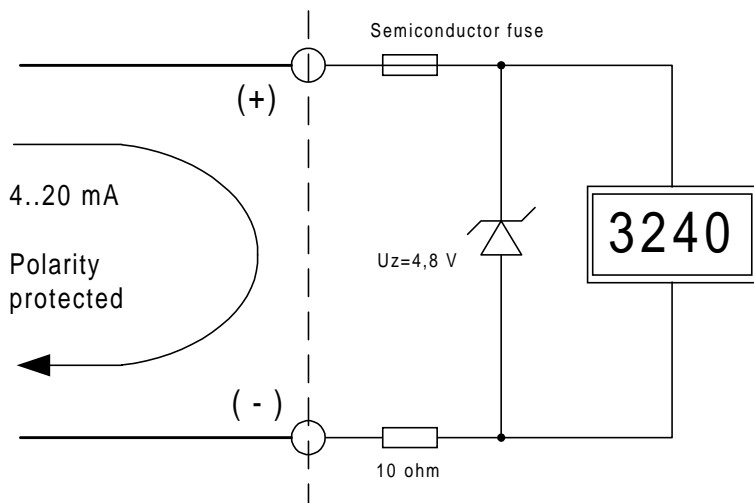

General description

Autopowered bright red LED-display needs no external power supply. Current signal 4-20 mA provides the necessary energy. Therefore, it is possible to install the meter in places having no auxiliary power available. You can now replace the autopowered LCD-displays, having very poor visibility, by bright red LED-displays. There are two models: 201 without alarms and model 202 with two alarm contacts.

Display scaling and configuration by front panel buttons. Unit has digital filter for stabilizing the 4-digit display.

This feature is useful in cases where large numerical value is needed.

In model 202 You may configure two optional alarms, high and low. Alarm value setting is designed for applications where it can stay as it is once adjusted. More versatile alarm settings and alternative alarm modes offer our powered models 2011 and 2021. Pass word is settable for entering configuration and alarm stages.

Front panel protection IP65.


Technical specifications:

Input	4..20 mA
Display scaling	-999...+9999
Accuracy	0.05% of span
Input voltage drop	201 continuous 4,8 V = 4-20 mA (comparable 240 Ω, non resistive)
	202 continuous 7,3 V = 4-20 mA (comparable 340 Ω, non resistive) with alarms
Alarm relays (option)	2 solid state relays (SSR), max. 250 VAC, 150 mA
Alarm reset	automatic or manual (hold) via front panel key
Alarm mode	High and low level
Hysteresis	Selectable 0..100 %
Display	4-digit red LED, 14.5 mm, adjustable brightness
Front plate protection	IP65 with gasket, without gasket IP54
Push buttons	Switches under front panel surface
Ambient temperature	0...+60 °C
Terminals	Detachable 2,5 mm ²
Weight	150 g


Order codes:

Model 201-4/20 mA	4-digit 4-20 mA loop powered indicator
Model 202-4/20 mA	With optional 2 alarms


Connections:

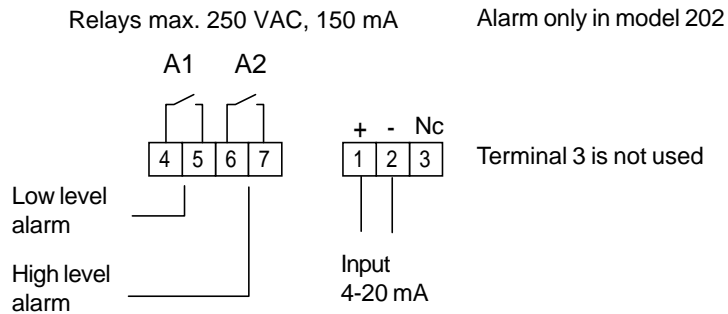

Case dimensions (mm):

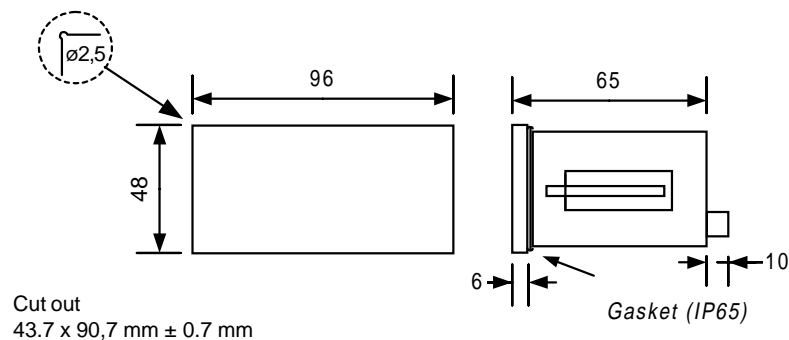

Front panel buttons and indicators

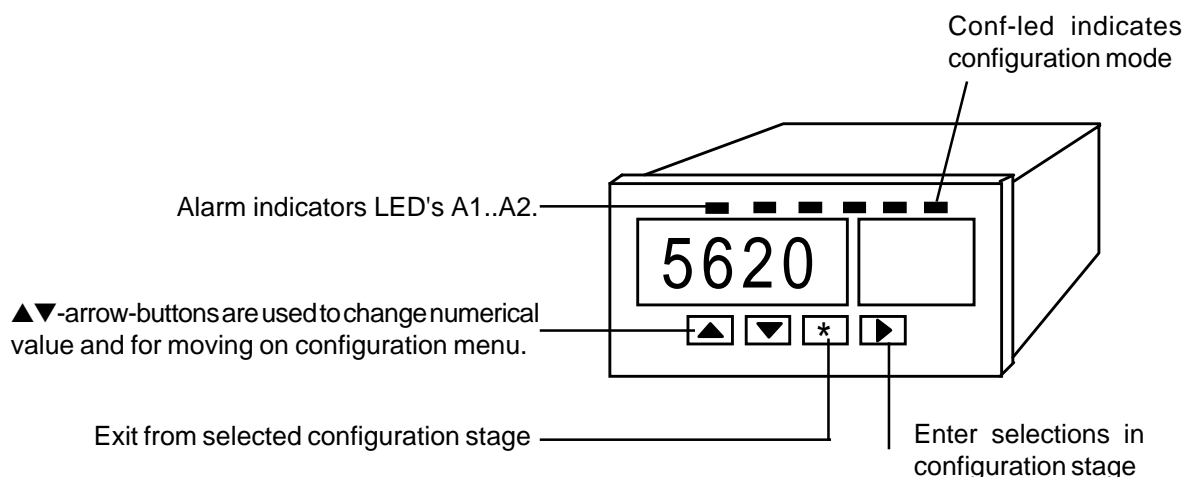

Configuration mode

Configuration can be started by pressing and holding **★**- and **▲**-keys simultaneously for 2 seconds. Configuration stage is for selecting input, display scaling and alarm function. Specified instructions on pages 6-7 section Configuration.

Resetting configuration parameters

Sometimes it is necessary to return indicator parameters to factory defaults, e.g. if secret access code is missed. Resetting can be done by pressing and holding **★**- and **▶**-keys simultaneously for 2 seconds when connecting input signal 4..20 mA. Procedure will reset all settings to factory defaults.

Alarm functions

Alarms can be viewed in configuration mode. Special instructions on pages 6-7, section configuration.

Disable alarms

Negative hysteresis value disables alarm function.


Manual reset

Auto reset is a standard function. Manual reset with front panel **▼**-key can be selected by choosing wider hysteresis than full span (Hi -Lo). For example: Input scaling is 0..100,0 i.e. full span is 100. Select hysteresis larger than 100 (9999) and You will have manual reset.

Alarm level setting


Alarm levels are selected with **▲▼**-buttons one number at a time. Changing begins from the most significant digit on the left, decimal point is selected first. Next digit to right is selected with **▶**-button. Accept and exit with **★**-button.

Value selection

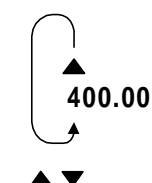

Numbers
0...9

Selecting next digit



Decimal point selection
with **▲▼**-keys before
number selection

Configuration

Configuration can be started by pressing and holding **★**- and **▲**-keys simultaneously for 2 seconds. Arrow keys **▲▼** moves up and down in main menu. Desired function is selected with **►**-key. Save mode can be selected directly by pushing **★**-key in main menu.

Alarm values and hysteresis are selected in configuration mode.


Changes can be restored by selecting text **UnDO** into display and pressing **►**-key. **Note!** Detailed configuration stage description on next page.

Enter into configuration mode

Configuration can be started by pressing and holding **★**- and **▲**-keys simultaneously for 2 seconds. Arrow keys **▲▼** moves up and down in main menu.

Access code for configuration

Configuration mode can be secured with pass word. If function is selected unit asks **CODE**. Enter required key combination as shown on page 8 section **CFCo**.

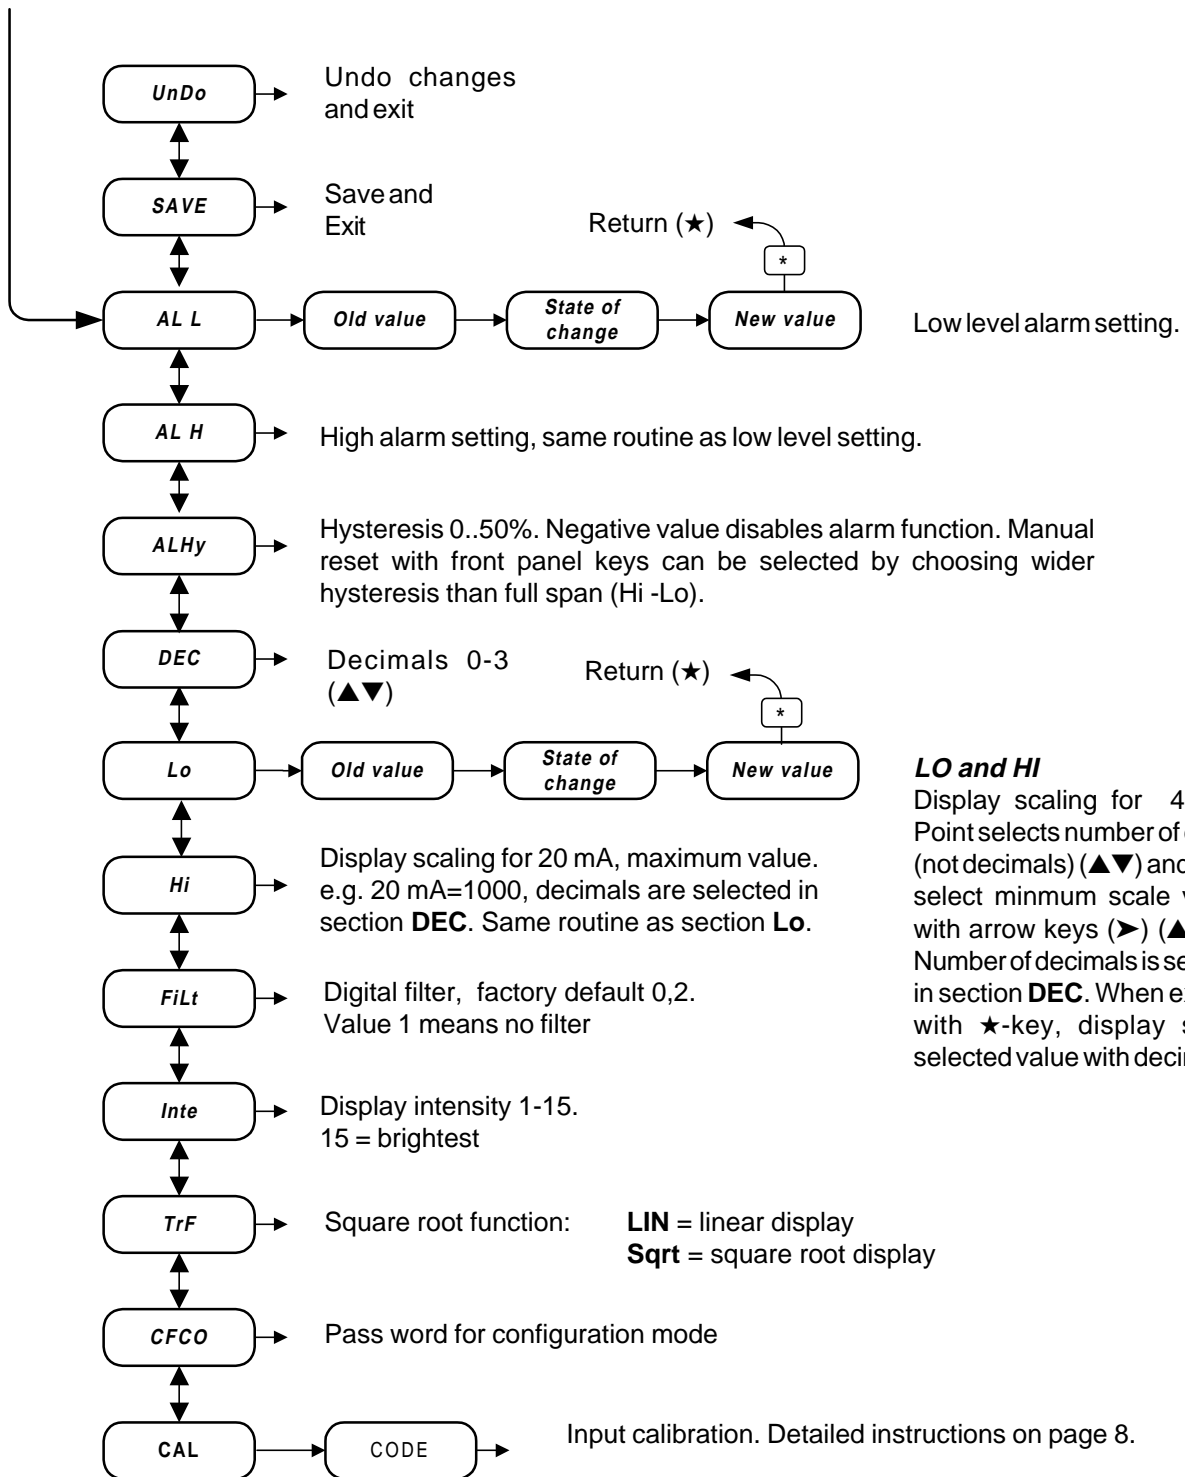

LO and HI

Display scaling for 4 mA. Point selects number of digits (not decimals) (**▲▼**) and then select minimum scale value with arrow keys (**►**) (**▲▼**). Number of decimals is selected in section **DEC**. When exiting with **★**-key, display show selected value with decimals.

Description

Input terminals

- 1 (+) signal loop (4...20mA)
- 2 (-) signal loop
- 3 Not used, can be used as a spare terminal

Voltage drop in 4..20 mA input loop is max 4.8 V. This corresponds 240 ohm loop resistance. When alarms are used (optional) voltage drop is max 7.3 V. Input is secured for reversed polarity and over current tolerance is 100 mA.

Alarm connections, only with model 202

- 4, 5 Low level alarm, display is lower than alarm level
- 6, 7 High level alarm, display is higher than alarm level

Solid state relays, SSR: max. 250 V \pm DC/AC, 150 mA, 12 ohm. Isolation between input loop 4 kV.

Alarms can be taken into use by removing jumper inside the case. Voltage drop will increase to 7,3 V.

Measuring mode

This is normal operating mode. Scaled input signal is in display. LED indicators functions are:

- A1 = Low level indicator
- A2 = High level indicator
- Conf = Unit in configuration or calibration mode

Measuring mode can be changed to Configuration mode by pressing simultaneously $\blacktriangle\blackstar$ -keys. If Access code is used it must be entered when display shows **Code**, enter selected button combination.

Configuration mode

Undo, Save \blacktriangleright

Exit from configuration mode. **SAVE** saves new configuration and **Undo** exits without saving.

AL L, AL H \blacktriangleright

Alarm levels (L=low, H=high). Both alarms cannot be energized at the same time. Therefore low level cannot have higher value than high alarm and vice versa. If input signal is under 3 mA relays will be de-energized. (Normal open 'NO' relays needs energy to be closed).

ALHy \blacktriangleright

Alarm hysteresis is number of digits below and above selected alarm level (both sides have same value). Normally alarm relays are energized when display value goes to alarm level and de-energized when it goes over hysteresis value.

Alarms can also have manual reset when hysteresis value is set larger than measuring range (full span). Manual reset is done with \blacktriangledown -key from front panel.

An example of Manual reset / hold function:

High level alarm is 100 °C and low level -5 °C. When input is over 100 °C, LED A2 lits (relay A2 energized) and it don't go off even if the input goes below 100 °C. It must be resetted manually with front panel key \blacktriangledown . Alarm will be resetted also if input goes below selected low level (-5°C). That is because both relays cannot be energized at the same time. If You do not want to use this possibility given by the other alarm, select it's value larger than the scaled range (not in use).

Alarms off

Negative hysteresis value disables alarm function.

Dec \blacktriangleright

Decimal selection 0..3, i.e. 0.9, 0.99 or 0.999

Lo, Hi \blacktriangleright

Lo and **Hi** scales display to input signal 4..20 mA. **Lo** value is selected for input 4 mA and correspondingly **Hi** value is for 20 mA input.

e.g. 4..20 mA = display **Lo** -100.. **Hi** +200

Filt \blacktriangleright

Display Filter. This function stabilizes display value when wide measuring range is used.

Filter value can be set between 1 (min) ..0.010 (max).

- 1.000 = no filter
- 0.200 = normal filter

e.g. 0.2 = (1/5) one new measurement and 4 old values or

0.1 = (1/10) one new + 9 old values (slower)

Alarms are controlled with the filtered value (filter affects to alarms reaction time).

Inte \blacktriangleright

Display intensity (brightness). You can change the intensity with $\blacktriangle\blacktriangledown$ -buttons. Hold \blacktriangledown -key to decrease intensity and vice versa.

In measuring mode intensity decreases automatically when input is under 6 mA.

TrF \blacktriangleright

Transfer function selection.

Lin = normal function

Sqrt = square root function

Square root function enables even negative input. This is useful in cases where e.g. flow goes backwards.

CFCo \blacktriangleright

Access code for configuration mode. Access code is formed with $\blacktriangle\blacktriangledown\blackstar\blacktriangleright$ -keys. Code is formed with six pushes of front panel buttons. Not in use when code is set to ($\blackstar\blackstar\blackstar\blackstar\blackstar\blackstar$) (factory default).

If configuration access code is forgotten, all the settings can be returned to factory defaults (not calibration) by holding down buttons \blackstar and \blacktriangleright while connecting input signal 4..20 mA.

Calibration

When calibrating, accurate 4 and 20 mA signals are needed. The device is factory supplied calibrated, and it is scaled to display 0-100.0 unless ordered differently.

CAL >

If the device displays incorrect readings (more than 0.05% of range), it should be recalibrated. Before doing that, ensure that the input signal is correct (using a separate mA meter) and that the scaling (Lo, Hi) is appropriate.

Enter configuration menu, select CAL and press ► key. Enter calibration password 112213, ▲▲▼▼▲★. "4_20" is displayed.

Feed a precise 4.000 mA signal to the device and press ▼ key. Wait until the display reappears. Then feed 20.000 mA and press ▲ key. Calibration values are stored immediately and cannot be undone.

Finally exit to the configuration menu with ★ key.

Nokeval Oy

Yrittäjätie 12

37100 NOKIA, FINLAND

Tel. +358 3-342 4800 email support@nokeval.com

Fax. +358 3-342 2066 http:// www.nokeval.com